

2013

Cadillac.

ATS

CONVENIENCE/PERSONALIZATION GUIDE

Review this guide for an overview of some important features in your Cadillac ATS. Some optional equipment (denoted by ♦) described in this guide may not be included in your vehicle. More detailed information can be found in your Owner Manual.

Instrument Panel

Instrument Panel Brightness Control

Head-Up Display Controls♦

Turn Signal Lever/Exterior Lamps Control

Instrument Cluster/Driver Information Center

Windshield Wipers Lever

Start/Stop Button

CUE Touch Screen♦

Audio System Controls♦

Hazard Warning Flashers

CD Player♦ (in Glove Box)



Power Mirrors Control

Lane Departure Warning♦/ Park Assist Buttons♦

Electric Park Brake Switch♦

Rake/Telescope Steering Column Adjuster

Cruise Control/Phone Buttons

Audio Steering Wheel Controls/ 5-way Controller

Traction Control and StabiliTrak/ Driving Mode Buttons














 









Storage Compartment Access♦ (behind control panel)

Heated Seat Buttons♦/ Climate Controls

Instrument Cluster



Symbols

	StabiliTrak Off		Forward Collision Alert		Engine Coolant Temperature
	Low Tire Pressure		StabiliTrak/Traction Control Engaged		Safety Belt Reminder
	Electric Parking Brake Service		Engine Oil Pressure Warning		Adaptive Forward Lighting Activated
	Antilock Brake System Warning		Security Notification		Electric Parking Brake Set
	Airbag Readiness		Lights On Reminder		Check Engine Warning
	Brake System Warning		Charging System Warning		Traction Control Off
	High Beam Headlamps		Low Fuel Warning		Cruise Control Activated
	Lane Departure Warning				Adaptive Cruise Control Activated

Note: Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster, as well as what to do to ensure safety and prevent damage to your vehicle.

Driver Information Center



The Driver Information Center displays a variety of vehicle information on three display zones. Zones can be personalized to display a digital speedometer, trip odometer, fuel range, average fuel economy, compass, oil life, tire pressure, navigation, phone or other vehicle information.

Use the 5-way controller on the right side of the steering wheel to navigate and select between the available menus. To select the desired display information:

1. Press the **< left** or **> right** side of the control bar to select one of the three display zones.
2. Press the control bar **^ up** or **v down** to scroll through a menu.
3. Press **SEL (Select)** to select a menu item. Press and hold to reset values.
4. Press the **< left** or **> right** side of the control bar to retain the information view and to exit the display zone.

See Instruments and Controls in your Owner Manual.

Head-Up Display◆

The Head-Up Display (HUD) displays some operating information onto the windshield, reducing the need to look away from the road. The HUD controls are located on the left side of the instrument panel.



◆ HUD

Press up or down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

+ - ☀

Press up or down to brighten or dim the display.

Hold down to turn off the display.

See Instruments and Controls in your Owner Manual.

Steering Wheel Controls

Cruise Control

 **On/Off**

 (if equipped with Adaptive Cruise Control)

SET- Set/Coast

Press down the control bar to set the speed. If active, press lightly to decrease speed by 1 mph; press fully to decrease speed by 5 mph.

RES+ Resume/Accelerate

Press up the control bar to resume a set speed. If active, press lightly to increase speed by 1 mph; press fully to increase speed by 5 mph.

Cancel

Press to cancel cruise control without erasing the set speed.

Follow Distance Gap (Adaptive Cruise Control)

Press to select a following gap time setting of Far, Medium, or Near.

See Driving and Operating in your Owner Manual.

Voice Recognition

 **Push to Talk**

Press to interact with the OnStar or Bluetooth system.

 **End Call/Mute**

Press to end/reject a call or mute the audio system.

See Instruments and Controls in your Owner Manual.



5-Way Controller

 **Left/Right**

Press to navigate to the left or right cluster display. Press the left < to exit a center display menu.

 **Up/Down**

Press the control bar up or down to scroll through a menu.

SEL Select

Press to select a highlighted menu item.

See Instruments and Controls in your Owner Manual.

Audio Controls

 **Volume**

Press + or - to increase or decrease the volume.

 **Next/Previous**

Press  up or  down to select the next or previous favorite radio station, track, or file.

See Instruments and Controls in your Owner Manual.

Heated Steering Wheel

 **On/Off**


See Instruments and Controls in your Owner Manual.

Touch Screen and Controls◆



CUE System Menus◆


CUE offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access the following items.

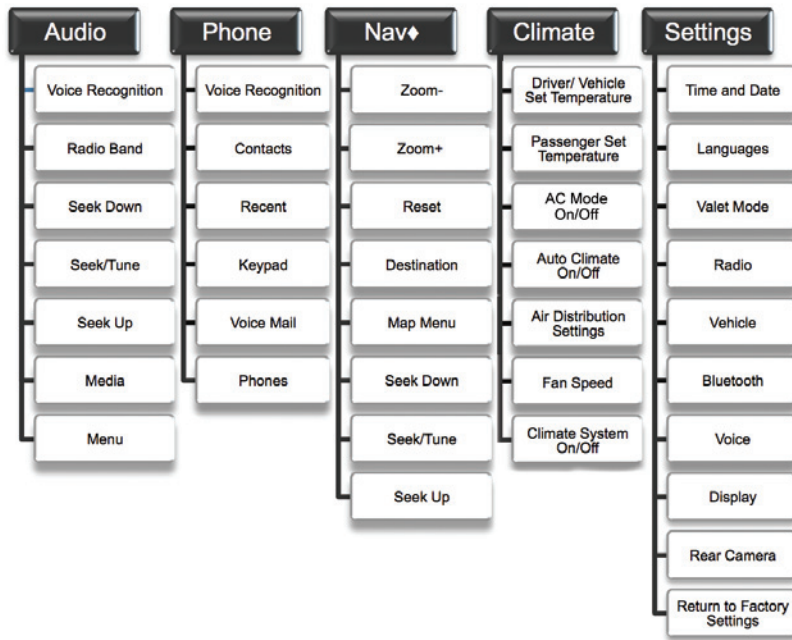



See your CUE System Owner Manual.


Interacting with the CUE System◆

To make interactions simple and safe, use the following gestures on the CUE touch screen just as you would on a smartphone.


Tap  Tap an item on the screen to perform the desired function.


Drag  Touch an item on the screen and drag your finger along the screen while holding down on the item.


Nudge  Press the desired item and move your finger in an up/down or side-to-side motion without releasing your finger. When your finger is removed, the item stops moving.

Flick  Press anywhere within a list or page and move your finger rapidly in an up/down or side-to-side motion, releasing from the screen while your finger is still moving.

Press and Hold  Press and hold an item.

Pinch  Place two fingers on the screen and bring them together in a pinching motion.

Spread  Place two fingers on the screen and spread them apart.

Double Tap  Tap an item twice on the screen quickly.

See your CUE System Owner Manual.

CUE System Features◆

CUE uses a Bluetooth or USB connection to link a smartphone, cell phone, USB flash drive or portable audio player/iPod™ to the touch screen infotainment display. It offers a variety of entertainment options, including streaming audio from the Internet through a smartphone, and features enhanced hands-free voice control, music information and the ability to play music files from a USB flash drive or an SD media card.

Setting the Time

1. Touch **Settings** on the home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch **+** or **-** to adjust the hours, minutes, and AM or PM.
5. Touch **◀ BACK** to exit the menu.

Storing Favorite Stations

Radio stations from all bands (AM, FM or XM) can be stored, in any order, on up to six pages of favorites.

1. Tune in the desired radio station.
2. Touch **FAV** to display the desired favorites page.
3. Touch and hold one of the favorite screen buttons until a beep is heard, indicating it is stored.
4. Repeat the steps to store another favorite station.

CD Player◆

The CD player is located in the glove box.

- ▶ Touch **CD Media** until CD is displayed to play a disc.

Note: Avoid engaging in extended searching for specific items or configuring system settings while driving.

Portable Audio Devices

Two USB ports and an SD media card slot are located in the center console storage compartment.

- ▶ Connect an iPod™, iPhone™, MP3 player, a USB flash drive or a USB mass storage device to a USB port or insert an SD media card into the card slot. CUE will read the connected device and build a list of voice commands. Search for music on-screen or by voice commands.

An auxiliary audio input jack also is located in the center console storage compartment.

PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres (a slight delay may occur when loading a song or changing a station). Requires an Internet-connected device with Pandora software.

- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ If you like a song, you can say “Thumbs up” using voice recognition, or touch the Thumbs Up screen button.
- ▶ Use voice commands to tune to your Pandora stations.

See your CUE System Owner Manual.

Natural Voice Recognition (included with CUE◆)

Control the music source and make phone calls hands-free using the enhanced voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will say "Please say a command," followed by a beep.
3. After the beep, say what you want it to do.

- **Hands-free calling:**

Example command: "Call Amanda" or "Dial 555-1212"

- **Connected music device search:**

Example command: "Play artist [name]"

Example command: "Play song 'Dance the Night Away'"

- **Radio control:**

Example command: "Tune FM 104.3" or "Tune XM Classic Vinyl"

Example command: "Tune Pandora" (Pandora app required)

- **Help:**

- Say "Help" for voice recognition assistance.
- To start speaking immediately without waiting for the beep, press the **Push to Talk** button twice.

See your CUE System Owner Manual.

Bluetooth® System (included with CUE◆)

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions.

Pair a Phone using Voice Recognition

1. Press the **Push to Talk** button.
2. After the beep, say "Pair." The system will search for your phone. A code appears on the display.
3. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
4. Enter the four-digit code that appears on the touch screen or confirm a six-digit code on the phone.
5. If your phone prompts you to accept the connection or phone book download, click "yes" and always allow.

Device List

Up to 10 devices may be paired with the in-vehicle Bluetooth system. To switch devices using voice recognition:

1. Press the **Push to Talk** button.
2. Say "Device list" or "Select device."
3. Select from the list of paired phones/devices.

Note: Vehicles equipped with the base audio system (not CUE) include Bluetooth phone functionality with basic voice prompt recognition. Up to five phones can be paired with the system.

Visit www.gm.com/bluetooth and see your CUE System Owner Manual.

Vehicle Personalization (included with CUE◆)



Some vehicle features can be customized using the controls on the audio system. The Vehicle Settings menu may include Climate and Air Quality; Collision/Detection Systems; Comfort and Convenience; Lighting; Power Door Locks; and Remote Locking, Unlocking and Starting.

1. Touch **Settings** on the home page.
2. Touch **Vehicle Settings**.
3. Touch the desired menu item.
4. Touch the desired feature and setting.
5. Touch **< BACK** to exit each menu.

See Instruments and Controls in your Owner Manual.

Navigation (included with CUE◆)



Enter a destination using the Single Line Destination feature. Approximate your desired destination and CUE's auto-fill function will enter the necessary information.

1. Touch **Navigation** on the home page.
2. Touch **Destination**.
3. Type the address, intersection or road.
4. Touch **Go**.
5. Select the desired name from the generated list.
6. Touch **Go**.

See your CUE System Owner Manual.

Remote Keyless Entry Transmitter

Lock

Press to lock all doors.

Unlock

Press to unlock the driver's door only or all doors.


Note: Use the touch screen to open Vehicle Settings >Remote Locking, Unlocking, Starting to change the Remote Lock and Unlock settings.

Remote Vehicle Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 13.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for three seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds or until the  button is pressed again.

Trunk Release

Press and hold to open the trunk.

Door Key

Press the button (A) to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door and rear seatbacks.




Keyless Access System

The Keyless Access System enables operation of the doors, ignition and trunk without removing the transmitter from your pocket or purse. **The system will recognize the transmitter when it is within three feet of the doors or trunk.**

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock sensor on the driver's door handle to unlock the driver's door; press it again within five seconds to unlock all doors.
- ▶ Press the lock sensor on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.

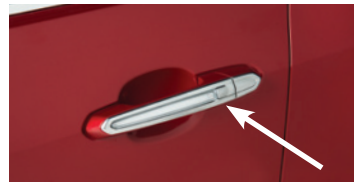

Keyless Locking

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock sensor on any door handle to lock all doors immediately.
- ▶ All doors will lock automatically after a short delay, if passive locking is turned on.

Note: Use the touch screen to open Vehicle Settings >Remote Locking, Unlocking, Starting to change the Keyless Locking and Unlocking settings.

See Keys, Doors and Windows in your Owner Manual.

See Keys, Doors and Windows in your Owner Manual

Pushbutton Start

Start

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate. **ENGINE START/STOP** will illuminate on the button when the headlamps are on.



Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the depression below the Accessory Power Outlet in the center console lower storage area to enable the engine to start.

Cell phone chargers may interfere with the operation of the Pushbutton Start System and should not be plugged in when starting or turning off the engine.

Stop/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power is available to operate the audio system, windows and sunroof♦ for 10 minutes or until the driver's door is opened.

Accessory

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the vehicle in Accessory mode. The yellow indicator on the button will illuminate.

See *Driving and Operating in your Owner Manual.*

Adaptive Remote Start♦

Starting the Vehicle

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button for at least two seconds.
When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.
3. Before driving, simultaneously press the brake pedal and the **ENGINE START/STOP** button to activate vehicle systems.

Canceling a Remote Start




- ▶ Press and hold the **Remote Start** until the parking lamps turn off.

Climate Control Operation

During a remote start, the automatic climate control system will default to a heating or cooling mode, depending on the outside temperature. Once the ignition is turned on, the system will operate at the same setting as when the vehicle was last turned off.


See *Keys, Doors and Windows in your Owner Manual.*


Power Door Locks/Safety Locks

- ▶ Press the power door  **Unlock**/ **Lock** button on either front door to unlock or lock all doors.
- ▶ Pull the inside door handle to unlock a door; pull the handle again to open the door.
- ▶ Press the  **Safety Locks** button on the driver's door to prevent the rear doors from opening from the inside and to disable the rear power windows. The button indicator will illuminate when activated.

See Keys, Doors and Windows in your Owner Manual.

Trunk Release

- ▶ To open the trunk from inside the vehicle, press the  **Trunk Release** button on the driver's door.
- ▶ To open the trunk from outside the vehicle, press the touch pad above the license plate. The vehicle must be unlocked or the Remote Keyless Entry transmitter must be within range of the trunk (if equipped with the Keyless Access System).

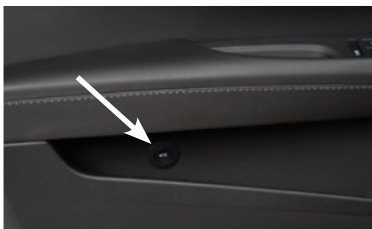

See Keys, Doors and Windows in your Owner Manual.

Power Outside Mirrors

Power Mirror Adjustment

- ▶ Move the power mirror selector switch to the Left (L) or Right (R) position to select the driver's or passenger's mirror; use the four-way control to adjust the mirror.



Reverse Tilt Mirror

The Reverse Tilt Mirror will tilt down the driver and passenger mirrors to improve visibility near the rear wheels when the vehicle is shifted into Reverse.

Note: Use the touch screen to open Settings > Vehicle > Comfort and Convenience to change the Reverse Tilt Mirror settings.

See Keys, Doors and Windows in your Owner Manual.

Valet Mode

- ▶ To lock/unlock various features of the vehicle, select Valet Mode under Vehicle Settings and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.


See your CUE System Owner Manual.

Enhanced Safety Strategy Features◆

The driver awareness and assist systems are based on a “control and alert” strategy that helps identify potential collision situations and intervenes when a collision threat appears more imminent, employing visual, audible and tactile (vibration) alerts, depending on the feature.

Driver Awareness Package

Lane Departure Warning – When crossing a detected lane marking without using a turn signal, a visual alert on the instrument panel flashes and the left or right side of the driver’s seat pulses.*

- ▶ Press the  **Lane Departure Warning** button on the left side of the instrument panel to turn the system on or off. The button is illuminated when the system is on.

Forward Collision Alert – When approaching a vehicle directly ahead too quickly, a visual alert on the windshield flashes and the driver’s seat pulses.*

- ▶ Press the  **Collision Alert** button on the left side of the steering wheel to set the alert timing (see the Collision/Detection Systems menu if equipped with Adaptive Cruise Control).

Safety Alert Seat – Subtle seat cushion vibration pulses, left or right, or simultaneously, alert the driver of potential hazards.

Rainsense Automatic Windshield Wipers – A sensor detects the amount of water on the windshield and controls the frequency of the wipers. See Windshield Wipers on page 16.

Rear Thorax Airbags – Seat-mounted side impact airbags for the rear seat outboard passengers.

Driver Assist Package (includes Driver Awareness Package)

Automatic Collision Preparation – Prepares the brakes or applies the brakes if an emergency collision appears immediate or the driver does not react to previous alerts.

*Audible notification may be selected instead of Safety Alert Seat vibration notification. See Vehicle Personalization on page 11.

Front and Rear Automatic Braking – Applies the brakes in potential collision situations to help reduce damage or help avoid collisions at lower speeds.

- ▶ Press the  **Parking Assist** button on the left side of the instrument panel to turn Automatic Braking on or off.


Adaptive Cruise Control – If a vehicle is detected ahead, the vehicle accelerates or brakes moderately to maintain the selected following gap. If driver action is required, the system pulses the driver’s seat.

- ▶ Press the  **Follow Distance Gap** button on the left side of the steering wheel to set a following gap.

Side Blind Zone Alert – When a vehicle is detected in a side blind spot area, a warning symbol displays on the side mirror.

- ▶ To turn off the system, see the Collision/Detection Systems menu under Vehicle Settings. The system turns on automatically every time the vehicle is started.

Rear Cross Traffic Alert – Warns of traffic coming in either direction by displaying a visual alert on the touch screen from the Rear Vision Camera, and the left or right side of the driver’s seat pulses.*

- ▶ Press the  **Parking Assist** button on the left side of the instrument panel to turn system on or off. The button is illuminated when the system is on.

Head-Up Display – Projects vehicle operating information on the windshield, reducing the need to look away from the road. See HUD on page 4.

Exterior Lighting



Exterior Lighting

Rotate the band to operate the exterior lamps.

 **Off/On**

AUTO Automatic Light Control

Activates the Daytime Running Lamps (DRLs) in the daytime and the headlamps and other exterior lamps at night or when necessary.

 **Parking Lamps**

 **Headlamps**


Adaptive Forward Lighting (included with HID headlamps)♦

The Adaptive Forward Lighting (AFL) system swivels the headlamps left or right in the direction of travel.

Note: The AFL system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

See Lighting in your Owner Manual.

Windshield Wipers

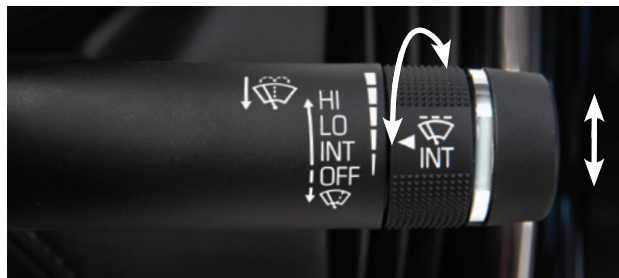

Move the lever to operate the windshield wipers.

HI Fast wipes

LO Slow wipes

INT Intermittent (Rainsense Sensitivity)

If equipped with Rainsense automatic wipers♦, place the lever in the INT position and rotate the band to adjust the system sensitivity. The wipers activate more often as the band is rotated upward.

OFF

Mist

Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

Note: When entering an automatic car wash, it is recommended to turn off the automatic Rainsense windshield wipers♦. If Rainsense is active, the transmission is in Neutral and vehicle speed is very slow, the windshield wipers will stop at the base of the windshield to protect the wiper arms from potential damage.

See Instruments and Controls in your Owner Manual.

Memory Seats◆



Set Memory Positions

1. Adjust the driver's seat and power outside mirrors to the desired positions.
2. Press and hold the **SET** button and button **1** on the driver's door until a beep sounds.
3. Repeat the steps using button **2** for a second driver.

Set Exit Position

1. Adjust the driver's seat and power outside mirrors to the desired positions.
2. Press and hold the **SET** button and the **Exit** button on the driver's door until a beep sounds.

Recall Positions



- Press and hold button **1**, **2** or **Exit** until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

See Seats and Restraints in your Owner Manual.



Sunroof◆



Express Open/Close the Sunroof

- ▶ Fully press the  **SLIDE** switch to express open the sunroof. Press the switch again while the sunroof is in motion to stop the sunroof at that position.
- ▶ Fully press the  **SLIDE** switch to express close the sunroof. Press the switch again while the sunroof is in motion to stop the sunroof at that position.

Tilt/Close the Sunroof

- ▶ Press the  **TILT** switch to tilt the sunroof.
- ▶ Press the  **TILT** switch to close the sunroof.

See Keys, Doors and Windows in your Owner Manual.

Steering Wheel Tap Shift◆



The 6-speed automatic transmission has a Tap Shift mode that allows you to shift gears similar to a manual transmission.

Using Tap Shift

1. While in Drive (D), use either paddle behind the steering wheel to temporarily take control of gear selection.
2. Press the right paddle to upshift or the left paddle to downshift. If current vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will automatically shift to 1st gear.

The automatic transmission also can be manually controlled by moving the shift lever to the left gate; tap the lever forward to upshift and rearward to downshift.






See Driving and Operating in your Owner Manual.

StabiliTrak®/Traction Control Systems◆

The traction control system limits wheelspin and the StabiliTrak system assists with the stability of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.



Turning the Systems Off/On

- ▶ Press the  **Traction Control/StabiliTrak** button on the center console to turn off traction control. The  **Traction Control Off** light on the instrument cluster will illuminate.
- ▶ Press and hold the  button to turn off StabiliTrak. The  **StabiliTrak Off** light on the instrument cluster will illuminate.
- ▶ Press the  button again to turn on either system.

See Driving and Operating in your Owner Manual.

Drive Mode Control System

The Drive Mode Control System automatically adjusts steering, automatic transmission (if equipped) and Magnetic Ride Control (if equipped) settings in real time.

- ▶ Press the **MODE** button on the center console to toggle through Touring (default at each ignition cycle), Sport, and Snow/Ice modes.

See Driving and Operating in your Owner Manual.

Electric Parking Brake

- ▶ To apply the parking brake, pull the **(P)** **Parking Brake** switch on the left side of the instrument panel (Driver Assist Package) or on the center console (manual transmission).
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.



See Driving and Operating in your Owner Manual.

Engine Oil Life System

The Engine Oil Life System calculates oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center when it's necessary to change the oil and filter. Reset the system to 100% only following an oil change.

Resetting the Oil Life System

1. Use the 5-way controller on the right side of the steering wheel to view the Settings page; press the **SEL** button.
2. Scroll to Info Pages; press the **SEL** button.
3. Scroll to Oil Life.
4. Press and hold the **SEL** button until 100% is displayed.

See Vehicle Care in your Owner Manual.

Tires

Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the **(!)** **Low Tire Pressure** warning light on the instrument cluster. The warning light will remain on until the tire pressure is corrected. **Current tire pressures are available in the Driver Information Center Info display.** The proper tire pressures for your vehicle are listed on the Tire and Loading Information label, located below the driver's door latch.

During cooler weather, the low tire pressure warning light may appear when the vehicle is first started and then turn off as the vehicle is driven. This may be an early indicator that tire pressures are getting low and the tires need to be inflated to the proper pressure.

Note: *The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance. It is the driver's responsibility to maintain correct tire pressures.*

Tire Sealant and Compressor Kit

The tire sealant and compressor kit can be used to temporarily seal small punctures in the tread area of the tire. The kit is located under the trunk floor. Refer to the kit instructions for complete operating information.

See Vehicle Care in your Owner Manual.

Owner Privileges™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Should you need to ask a question, make a comment, or request additional information, Cadillac Customer Assistance is available anytime.

CADILLAC ONLINE OWNER CENTER

Visit my.cadillac.com for access to the Cadillac Owner Center, which features online owner manuals, maintenance information, service records, and more.

myCADILLAC and ONSTAR MOBILE APPS

The myCadillac and OnStar RemoteLink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your iPhone® or Android™ device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit OnStar.com.

CUE SUPPORT

For information or assistance operating the CUE infotainment system, call 1-855-4-CUE-NOW (1-855-428-3669).

Always demand genuine GM Parts

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2012 by General Motors. All rights reserved.

